



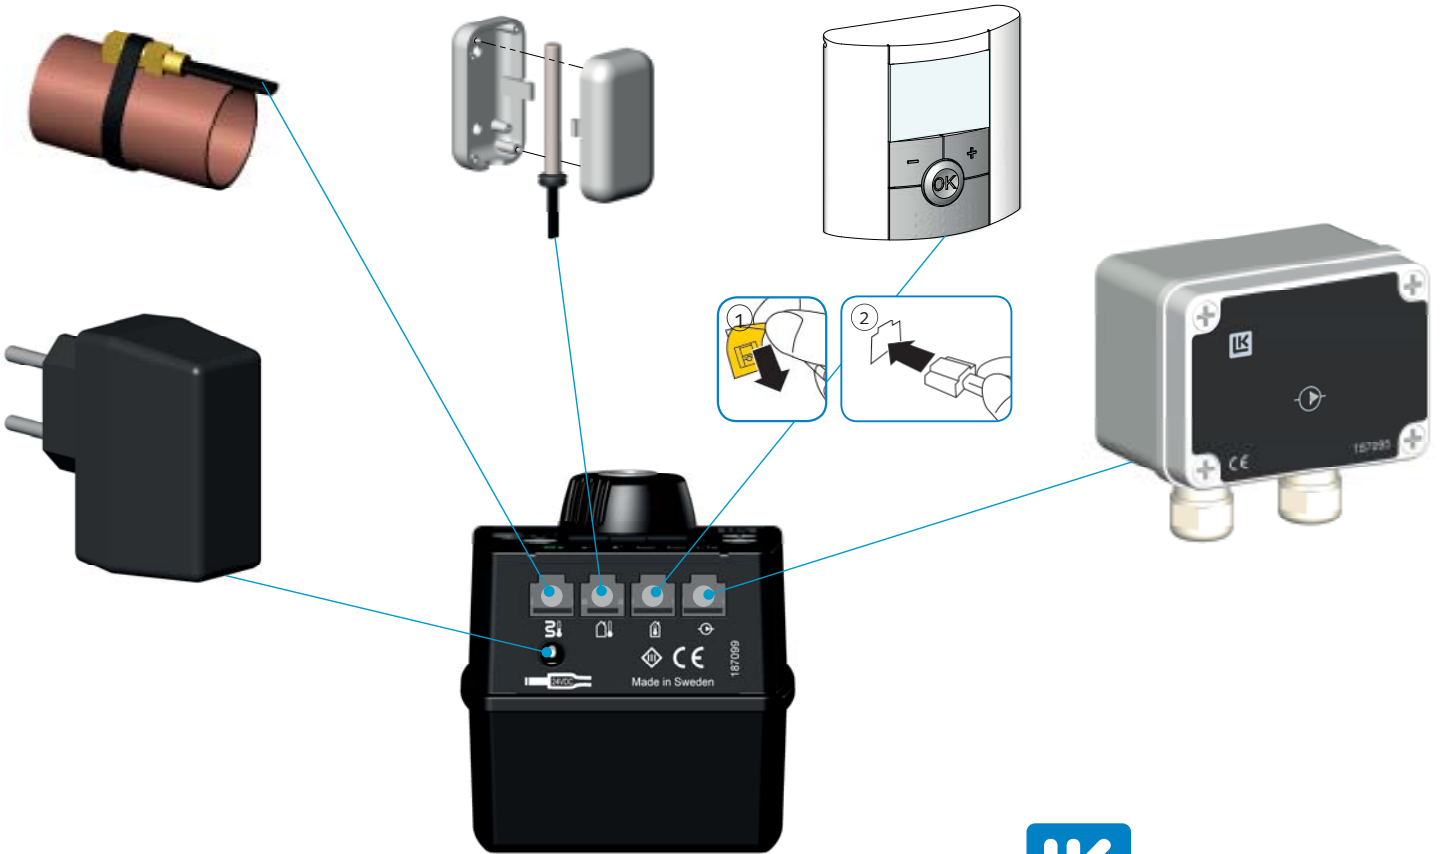

# Quick Start Guide


LK 110/120/130 SmartComfort



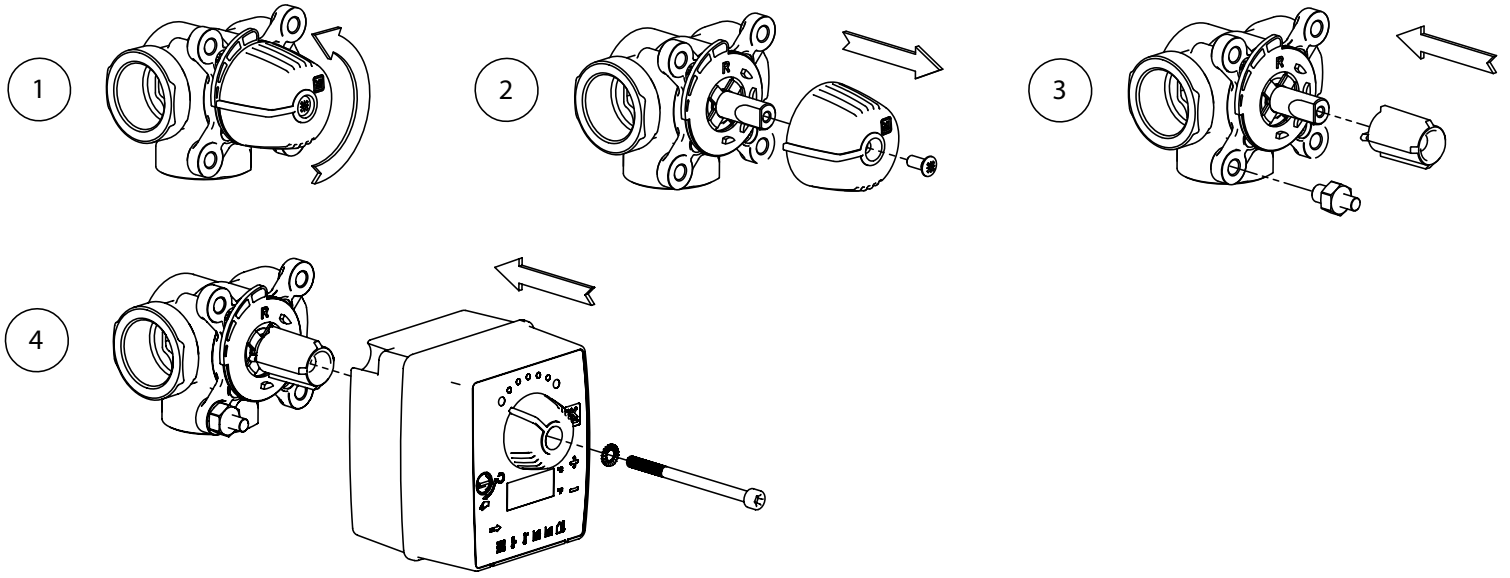

 Automatic position  
Automatikposition  
Mode automatique  
Modalità automatica  
Automatiikkatila  
Automatikläge  
Automatisk tilstand


Disengaging knob  
Handverstellknopf  
Vis découplage  
Vite di disaccoppiamento  
Vapautusruuvi  
Frikopplingsvred  
Frakoblingshåndtag


 Manual operation  
Manueller Betrieb  
Commande manuelle  
Funzionamento manuale  
Käsisäätö  
Handmanövrering  
Manuel betjening


 Function selector  
Funktionstaste  
Bouton de basculement  
Pulsante funzione  
Valintapainike  
Funktionsknapp  
Funktionsknap


 Supply temperature displayed, no setting  
Vorlauftemperatur Anzeige, keine Einstellung  
Affichage de la température d'alimentation (pas de réglage)  
Temperatura acqua mandata indicazione (non impostazione)  
Menovesilämpötila näyttö, ei asettelu  
Framledningstemperatur visning, ej inställning  
Fremløbstemperatur - visning, ikke indstilling


 Min. temperature Max. temperature  
Mindesttemperatur Maximaltemperatur  
Température mini. Température maxi.  
Temperatura min. Temperatura max.  
Min. lämpötila Max. lämpötila  
Min. temperatur Max. temperatur  
Min.-temperatur Maks.-temperatur

Plus button, to increase a value   
Plus-Taste zum Erhöhen von Werten  
Bouton plus, pour augmenter une valeur  
Pulsante più, per aumentare un valore  
Pluspainike arvon suurentamiseksi  
Plusknapp, för ökning av ett värde  
Plus-knap til at øge en værdi

Minus button, to reduce a value   
Minus-Taste zum Verringern von Werten  
Bouton moins, pour diminuer une valeur  
Pulsante meno, per diminuire un valore  
Miinuspainike arvon pienentämiseksi  
Minusknapp, för minskning av ett värde  
Minus-knap til at reducere en værdi

Outdoor temperature displayed, no setting   
Außentemperatur Anzeige, keine Einstellung  
Affichage de la température extérieure (pas de réglage)  
Temperatura esterna indicazione (non impostazione)  
Ukolämpötila näyttö, ei asettelu  
Udetemperatur visning, ej inställning  
Udetemperatur - visning, ikke indstilling

Parallel shift of regulating curve, setting   
Parallelverschiebung der Regelkurve, Einstellung  
Déplacement parallèle de la courbe de régulation, réglage  
Traslazione parallela della curva di regolazione, impostazione  
Säätökäyrän suuntaussiirto, asetus  
Parallellförskjutning av reglerkurva, inställning  
Parallelforskydning af kontrolkurve, indstilling

Regulating curve, setting   
Regelkurve, Einstellung  
Courbe de régulation, réglage  
Curva di regolazione, impostazione  
Säätökäyrä, asettelu  
Reglerkurva, inställning  
Kontrolkurve, indstilling

## LK Armatur AB

Garnisonsgatan 49 • SE-254 66 Helsingborg • Sweden

Tel: +46 (0)42-16 92 00 • Fax: +46 (0)42-16 92 20

info@lkarmatur.se • order@lkarmatur.se

www.lkarmatur.se

 youtube.com/lkarmatur



LK Armatur